

Manufactures Detail Print Set


Revision Number: 1.0

Scale : Full (Unless otherwise noted)

Flip-in' Hinge

Website: www.flip-in-hinge.com
Email: sales@flip-in-hinge.com

Application: Full Scale Installation Drilling Patterns
Drawing Purpose: General Information
Date: 4/1/2014

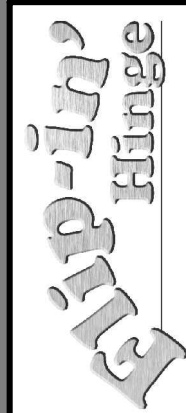

1.375 MIN. HGT REQ'D FOR DOOR CLEARANCE

TOP OF DOOR

1.375 MIN. HGT REQ'D FOR DOOR CLEARANCE

16.000 MIN. DOOR HGT.

.125 RECOMMENDED

VERTICAL EDGE OF DOOR

FLUSH CABINET INTERIOR SIDE

BASEPLATE DRILL LOCATIONS ARE POSITIONED FROM TOP BACKSIDE CORNER OF DOOR

NOTE:

DO NOT DRILL FINAL SET HOLES UNTIL CABINET HAS BEEN INSTALLED IN PERMANENT LOCATION IN FIELD AND FINAL ADJUSTMENTS ON DOORS HAVE BEEN COMPLETED.

* #6 SCREWS SHOULD BE USED, SIZE PILOT HOLES ACCORDINGLY

